

TWIST - FLEXIBLE BANNER STAND user instructions

1



TWIST Flexible Banner stand contents vary:
Silver aluminium bases / rubber stoppers
3 / 4 aluminium pole set
Spotlight and plug
Printed graphics and graphics case tube
All integrated within a portable carry case

2



Insert the base pole into the base. Push in firmly to secure.

Attach additional pole by inserting and twisting to lock into position.

3



Insert the prongs of the light into the holes on the top pole section.

4



Attach the top pole section to the other pole sections. Your frame is now complete.

5



Take your printed graphic panel and hook the top header bar over the retaining clip on the top of the pole.

6



With the graphics secure at the top, pull down the banner and insert the footer pegs into the holes in the base. Insert the rubber stoppers to secure the graphic.

7



If you have the optional flexi link kit, several Twist banners can be linked together. Insert the Flexi link graphic panel into the sides of the banner graphics, top and bottom, as shown.

8



Secure the Twist system at the back with the three supplied magnet strips. Start at the top and work downwards.

9



The Twist flexible display stand is now ready for use.