

Desktop Divider Installation

Drill through clamps



Scan our QR code to
view the full
assembly video



Desk Pins



Desk Screws

**Supplied as standard unless
upgraded to easy fix clamps**

**Additional tools:
17mm spanner &
10mm drill**



Step 1

Remove the screens from packaging and lay on a flat desk. Place both pins in the holes at the bottom of the screen.



Step 2

Place the screen in the desired position and push down on the desk, ensuring that a mark is left by the pins.



Step 3

When drilling ensure the drill is kept straight to ensure the screen sits correctly.



Step 4

Place the screens provided through the desk from the bottom. Add the washer and wind the bolt down until it's flush.



Step 5

Use the 17mm spanner to tighten until secure.




Step 6

Remove the pins from the screen and place the screen onto the screw fitted to the desk. Push down until flush with the desk.

Desktop Divider Installation

Easy Fix Clamps

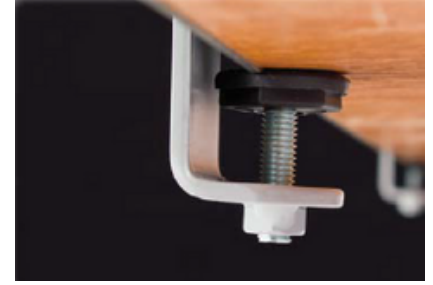

Step 1

Remove the screens from packaging and lay on a flat desk.

Step 2

Slide clamps into the holes at the base of the screen and attach to desk.

Step 3

Place clamps against the desk and adjust to measure the thickness you require.



Step 4

Position the screen flush with the edge of the desk.

Step 5

Once you are happy with the position of the screen, tighten the clamps into place with the supplied allen key.