

DESKTOP DRILL THROUGH INSTALLATION INSTRUCTIONS

PLEASE NOTE:
ADDITIONAL TOOLS NEEDED FOR SCREEN INSTALLATION.
17MM SPANNER & 10MM DRILL

Each screen supplied with



1



Remove the screens from the packaging and lay flat on the desk. Place both pins in the holes at the bottom of the screen.

2



Place the screen in the desired position and push down onto the desk, ensuring that a mark is left by the pins for drilling.

3



When drilling ensure the drill is kept straight to avoid the screen sitting out of line.

4



Place the screws provided through the desk from the bottom. Add the washer and wind the bolt down until it is flush.

5



Use the 17m spanner to tighten until secure.

6



Remove the pins from the screen and place the screen onto the screws on the desk. Push down until flush and level with the desk.

7




Repeat process on all screens until completion.
To remove, simply lift screen up off the screws.



DESKTOP SCREEN INSTALLATION INSTRUCTIONS

user instructions

1

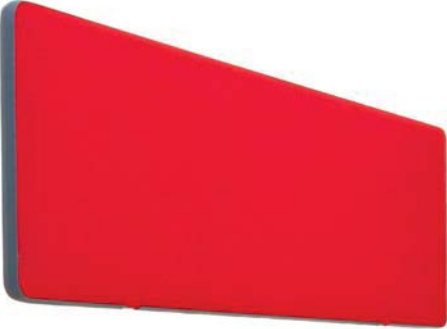

Remove the screens from the packaging and lay flat on the desk.

2



Slide the clamps into the holes provided in the screen and attach to the desk.

3



Place clamps against the desk and adjust to measure the thickness you require.

4



Position the screen flush with the edge of the desk.

5



Once you are happy with the position of the screen tighten the clamps into place with the supplied allen key

6



Place the screens together and slot the linking strip into the edging channel.

