

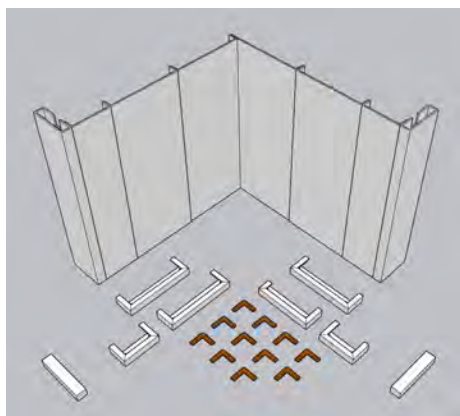





Modulink Pelnets Example - 3x3 L-Shape

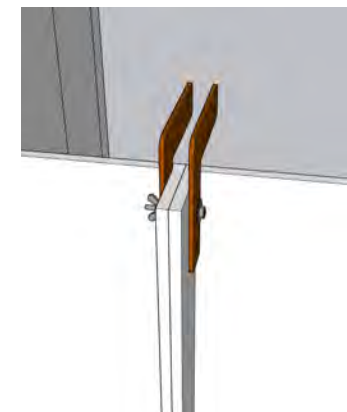




Pelnets, MDF brackets and Bolts are provided. Quantities can vary depending on type.

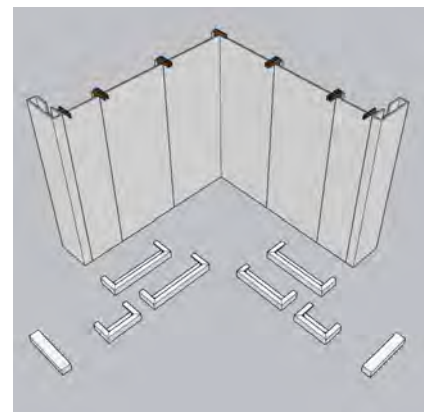

Start with fitting the MDF brackets using the bolts provided.
Fit them by using the top connector on the rear of the wall.
Remove the top bolt and fit the MDF using the new longer bolt.

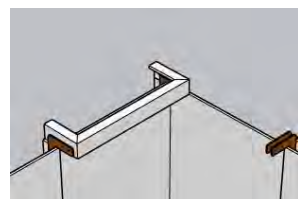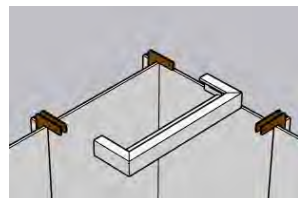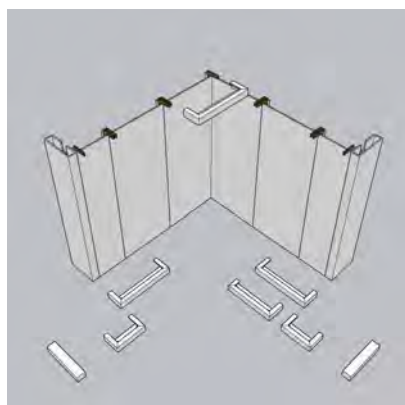


Start with the corner. Slide a 900 Pelmet onto the brackets.
The Pelmet should sit on top of the wall when in position.

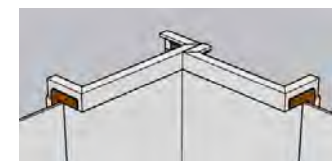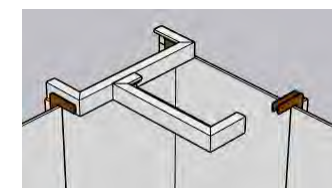
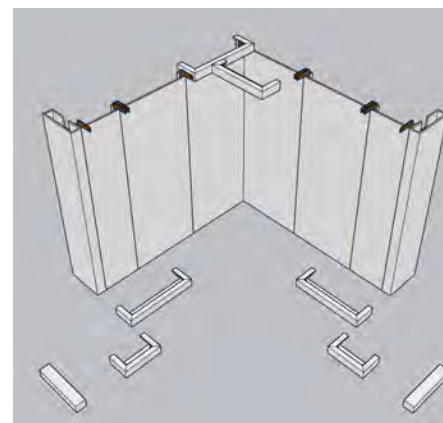


Next slide a 750 Pelmet onto the single bracket.
(Your Pelnets may be opposite to the above image)


Modulink Pelmet Example - 3x3 L-Shape

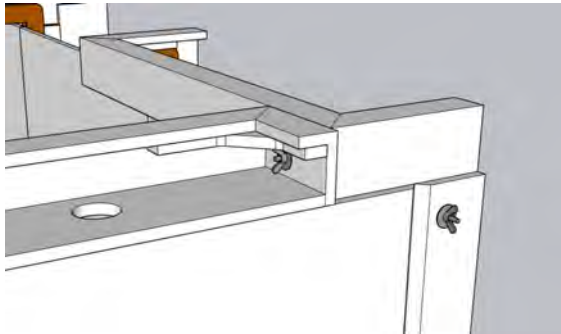


If required a bolt can be used to connect the 2 Pelmet
(You would need to create your own hole)

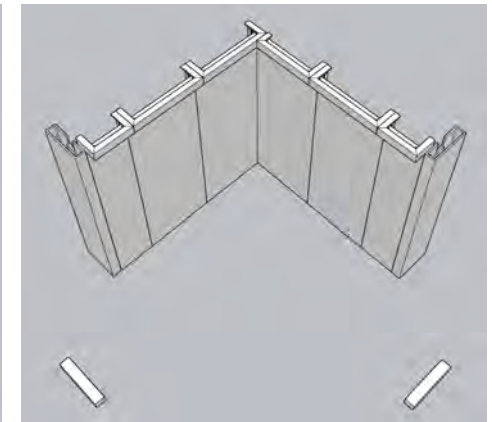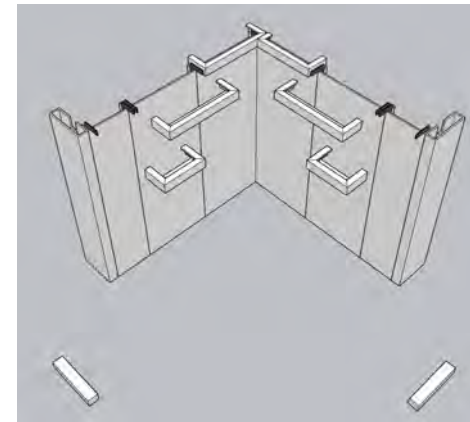

Slide the rest of the 900 Pelmet onto their brackets.
Followed by the 480 Pelmet.

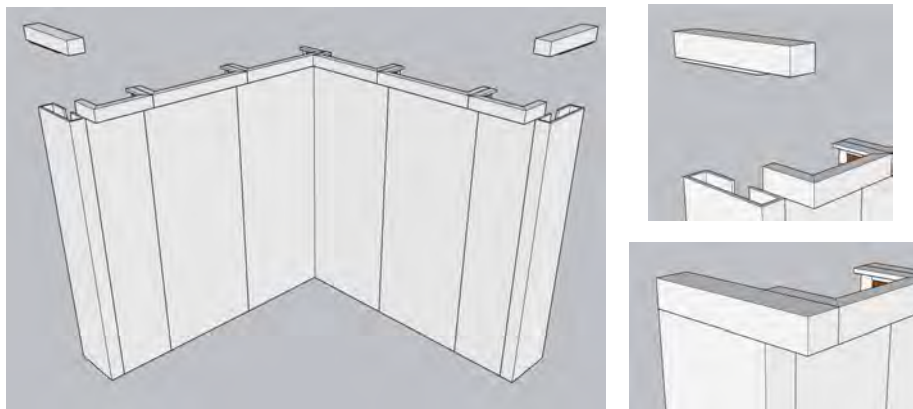

The end Pelmet will slot into place.

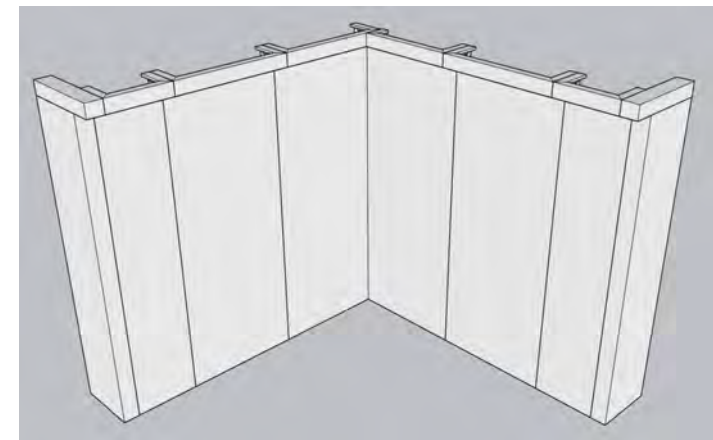

If required bolts can be added between Pelmet to keep secure.
(You would need to create your own hole)